



3 7 3 . 0 4 8

Special clamp for internal cuts (extra accessory)

This clamp is especially handy for cutting out a series of internal shapes. It replaces the top saw blade clip and makes it easier to remove and replace the blade for internal cuts.

Fit the attachment on the upper arm of the saw and lock it in position with the top adjusting wheel (diagram 1) Re-adjust the arm so that it is looser as normal, as the blade will fit further up as usual. Insert the blade, from the front, into the special attachment (Dia 2). Making sure, that the blade does not bend (Dia 3). Close the attachment with the cross head adjuster (Dia 2) Adjust blade as normal before switching the machine on.

Note: when using this attachment, it should always be locked by the adjusting wheel. This will make the process of changing the blade easier and quicker.