

1 1 2 . 6 8 4

Parts list for Generator

1	1112	Plate, 11 x 5 holes	1 part
2	1122	Trapezium plate, 5 x 3 holes	1 part
3	1123	Trapezium plate, 7 x 5 holes	2 parts
4	1151	Disc 10 mm dia	1 part
5	1161	Disc 50 mm dia	1 part
6	1251	Angle 1 x 1 hole	2 parts
7	1351	Axle 35mm	1 part
8	1352	Axle 65mm	1 part
9	1353	Axle 95mm	1 part
10	1381	Screw M4 x 4mm	11 part
11	1401	Fixing ring	1 part
12	1411	Handle	1 part
13	1451	Gear 37 teeth	2 parts
14	1452	Gear 63 teeth	1 part
15	1461	qPinion 13 teeth	3 parts
16	1492	Cable	1 part
17	1495	Motor holder	1 part
18	1496	Motor	1 part
19	1501	Screw M4 x 6	13 parts
20	1511	Nut M4	13 parts
21	1551	Screwdriver 4mm	1 part
22	1552	Screwdriver 6mm	1 part
23	1553	Spanner	1 part
24	1730	Metal eye	1 part
25	1734	Bulb holder E 10	1 part
26	1735	Bulb E 10 3.5 volt/ 0.2A	1 part

1 1 2 . 6 7 3

Parts List- Gears

1	1112	Plate 11 x 5 holes	1 part
2	1122	Trapezium 5 x 3 hole	1 part
3	1123	Trapezium 7 x 5 hole	2 parts
4	1151	Disc 10mm dia	1 part
5	1251	Angle 1 x 1 hole	2 parts
6	1302	Wheel centre 30mm dia	1 part
7	1351	Axle 35mm	1 part
8	1352	Axle 65mm	1 part
9	1353	Axle 95mm	1 part
10	1381	Screw thread M4 x 4mm	15 parts
11	1401	Fixing ring	2 parts
12	1451	Gear 37 teeth	3 parts
13	1452	Gear 63 teeth	2 parts
14	1461	Pinion 13 teeth	4 parts
15	1495	Motor holder	1 part
16	1496	Motor	1 part
17	1501	Screw thread M4 x 6mm	13 parts
18	1511	Nuts M4	13 parts
19	1551	Screwdriver 4mm	1 part
20	1552	Screwdriver 6mm	1 part
21	1553	Spanner	1 part