



120.298


Office Set with Quartz Clock

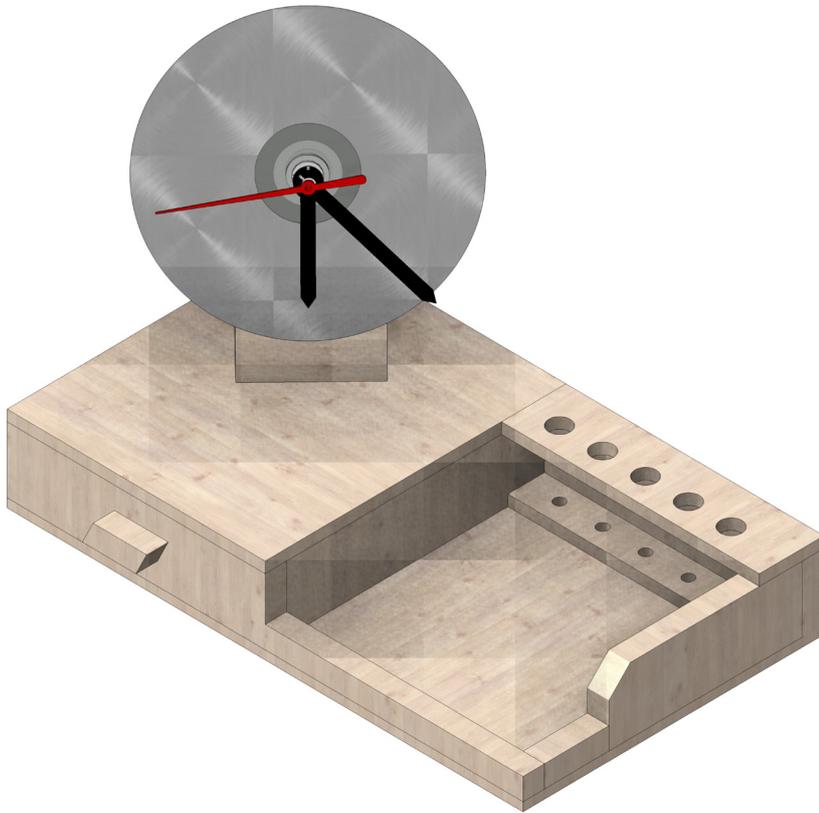


Required Tools:

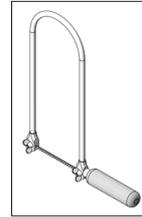


Jigsaw or Scroll Saw

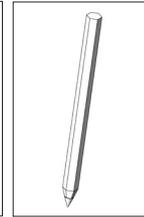


Pencil

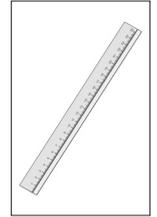


Ruler

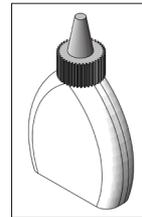


Wood Glue

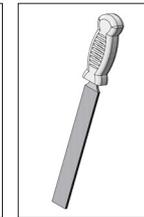


File

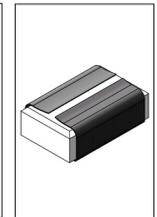


Sandpaper

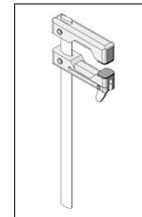


Locking Clamp

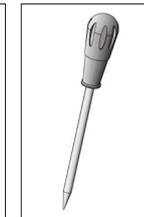

Pricking Awl

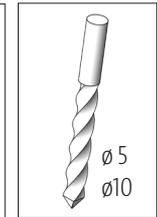

Drill Bit

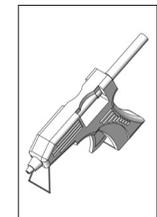


Hot Glue Gun

Please Note:


The Opitec Range of projects is not intended as play toys for young children. They are teaching aids for young people learning the skills of craft, design and technology. These projects should only be undertaken and operated with the guidance of a fully qualified adult. The finished projects are not suitable to give to children under 3 years old. Some parts can be swallowed. Danger of suffocation!

Components List	Quantity	Size (mm)	Description	Part No.
Plywood	1	240x140x4	Base plate	1
Plywood	2	180x120x5	Lid/pen holder/drawer	2
Wooden Strips	3	300x30x10	Frame Strips	3
Wooden Strip	1	200x10x10	Frame Strip	4
Wooden Strip	1	75x50x20	Clock Holder	5
CD-blanks	1	ø120	Clock Face	6
Quartz movement	1		Quartz movement	7
Metal clock hands	1	60/46	Clock hands	8
Second hand	1	70	Second hand	9
Phillips Panhead Screw	1		Screw	10
Washer	1	20/10,5	Fixing CD	11
Washer	1	4/3	Fixing	12


Instructions 120.298
Office Set with Quartz Clock

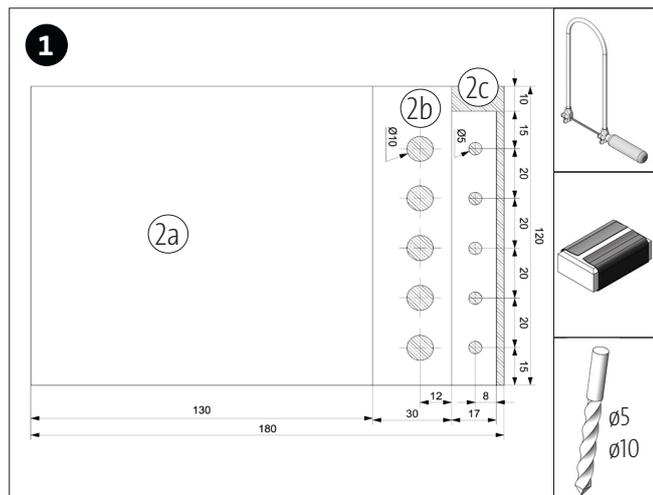


Transfer the template for the lid and the pen holder (page 5) onto the plywood (2). Drill the holes $\varnothing 5$, $\varnothing 10$. Then saw out and clean the parts.

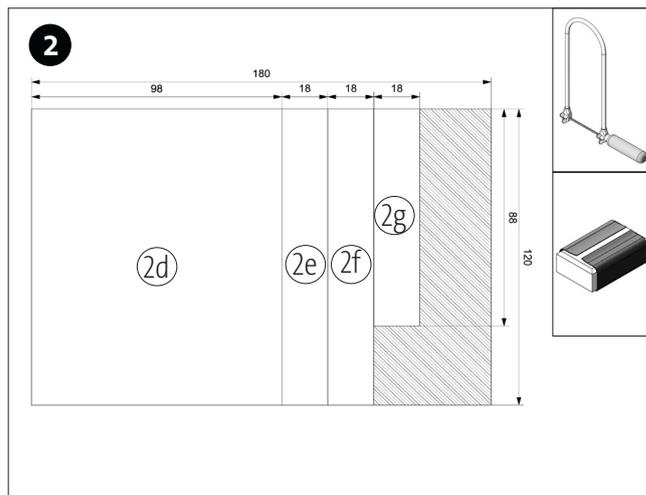


Transfer the template for the drawer (page 7) to the second plywood (2). Then saw out and clean the parts.

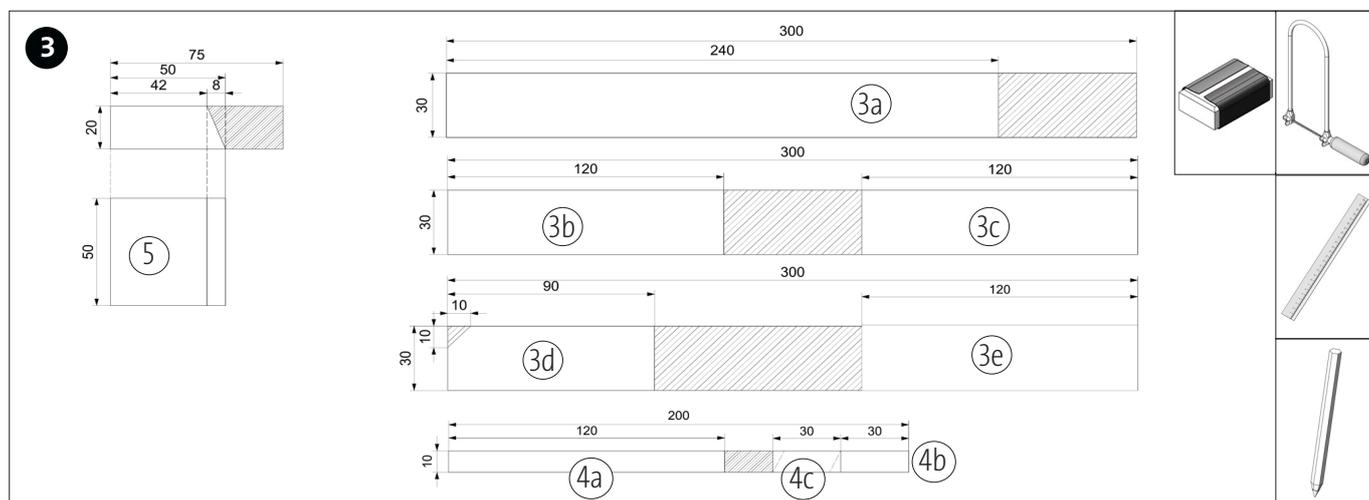


Cut the two wooden strips (3-5) to length as illustrated. Clean the saw cuts.

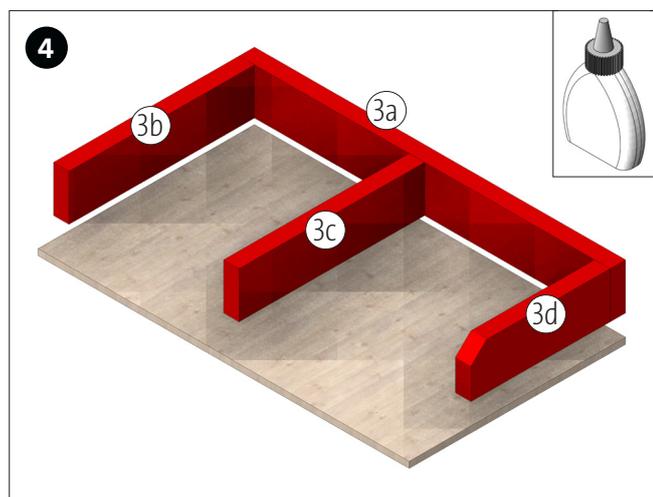


Glue the wooden strips (3a-3d) to the base plate as shown.

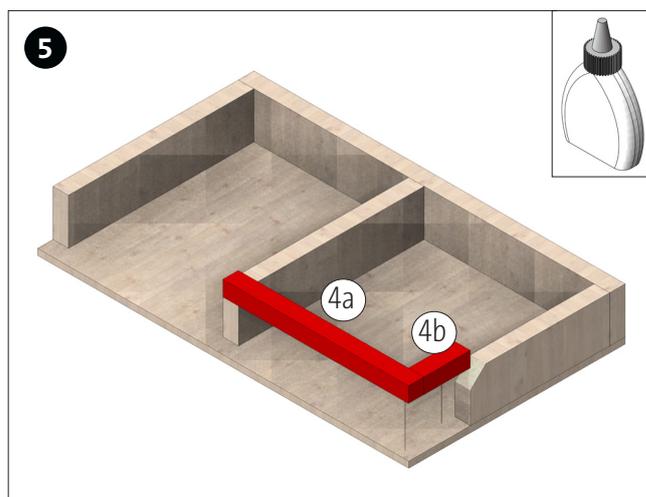


Glue on the front strips (4a+4b) as shown.

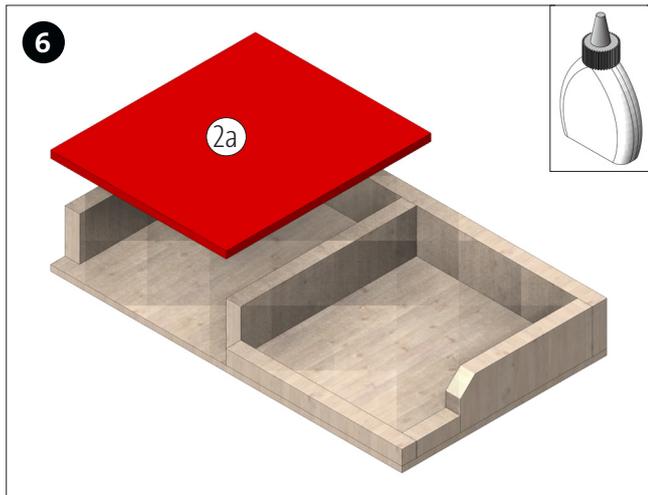


Glue the lid (2a) flush to the rear and side edges as shown.

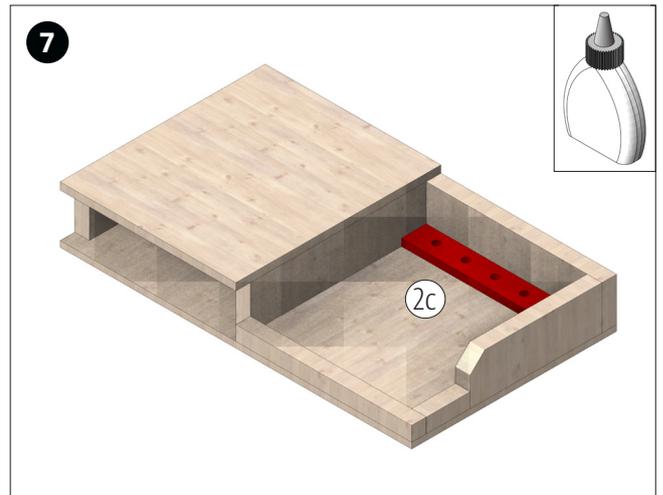


Glue the bottom part of the pen holder (2c) as shown.

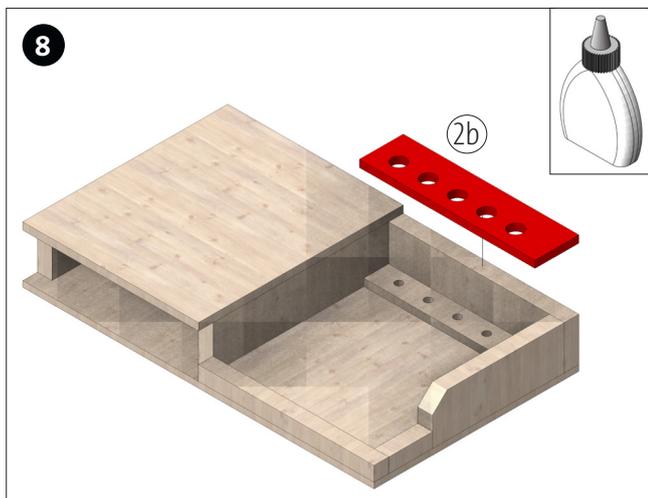

Glue the upper part of the pen holder (2b) flush to the rear edge as shown.

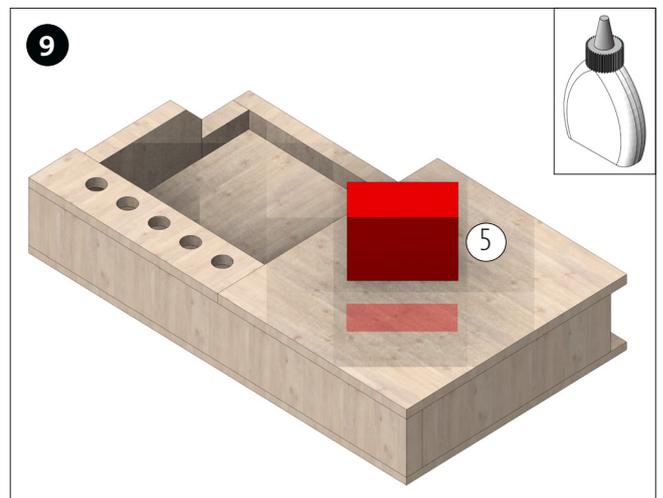


Glue the clock support (5) to the lid (2a) with the beveled side facing down.

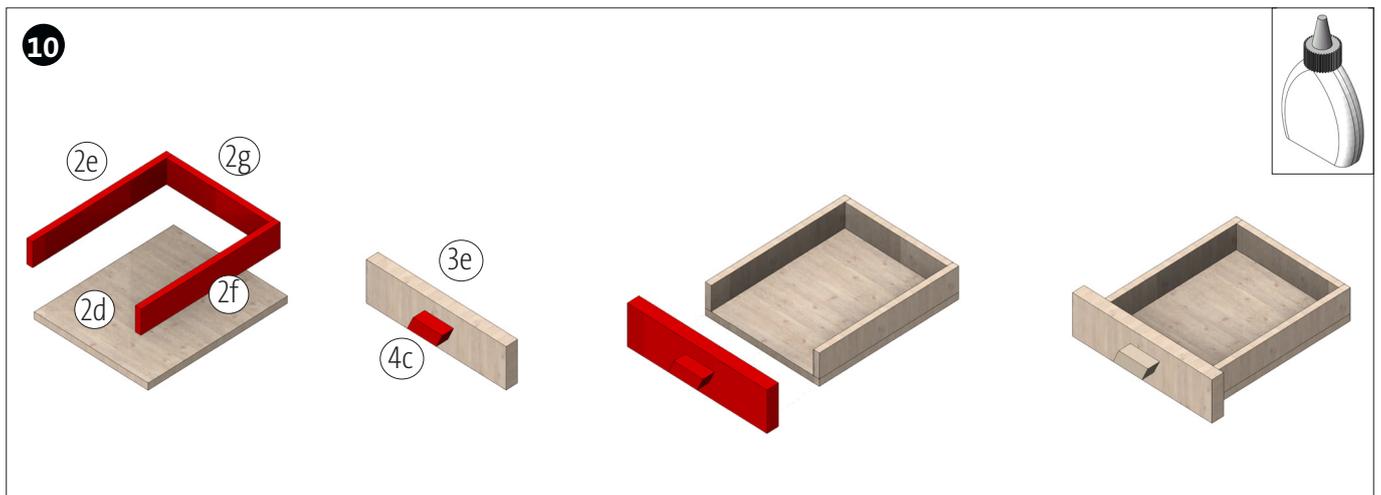


Glue the drawer strips (2e-2f) to the base (2d). Glue the handle part (4c) centred on the drawer lid (3e). Then glue the finished lid to the rest flush with the bottom edge.


Instructions 120.298
Office Set with Quartz Clock

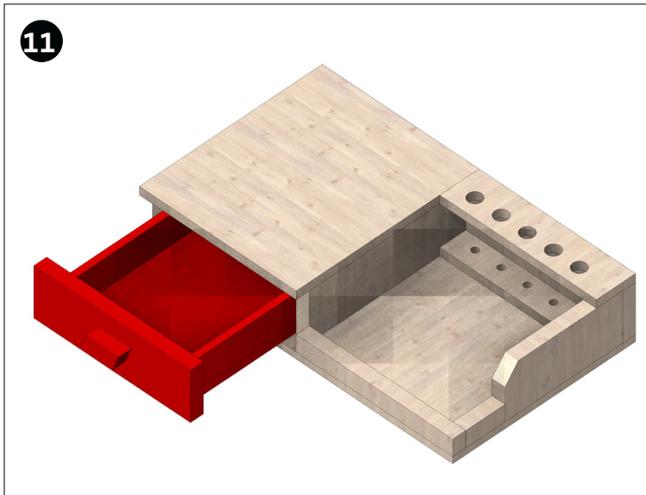


Slide the finished drawer into the specific opening.

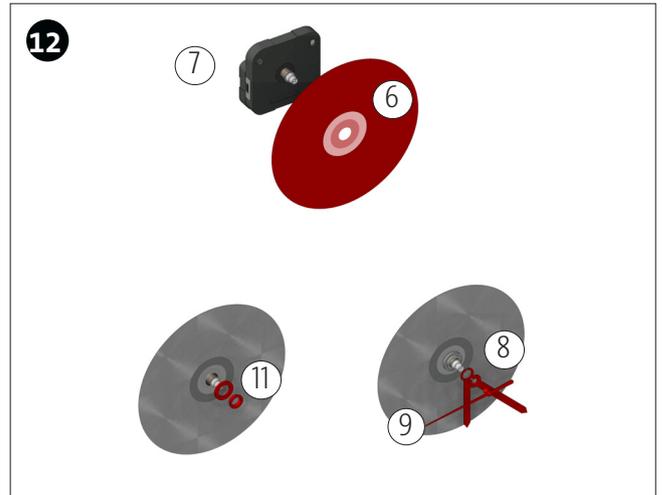

Push the CD (6) onto the quartz movement shaft. Fasten with the washer (11) and the enclosed screw nut. Then attach the hands as shown.

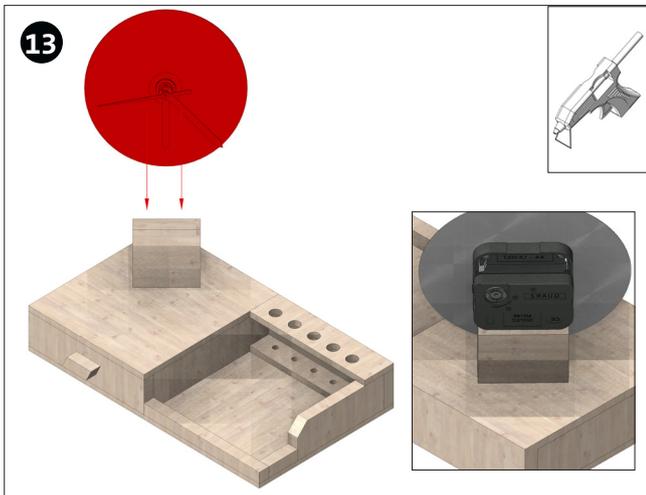


Glue the finished clock to the clock holder (5) using hot glue.

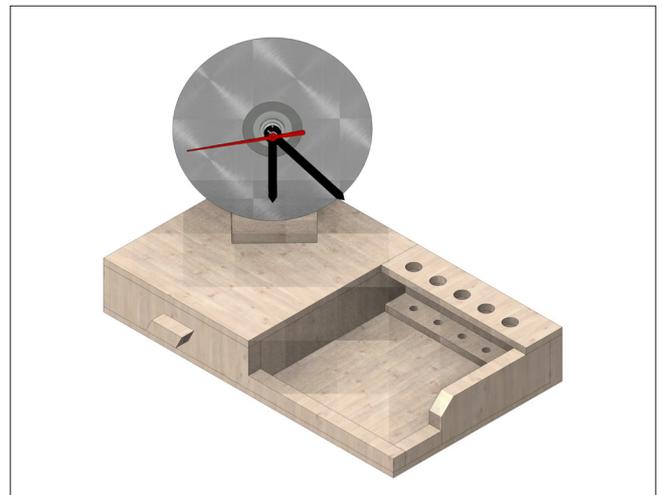

Done!

Instructions 120.298
Office Set with Quartz Clock

Template lid/pen holder
Scale 1:1

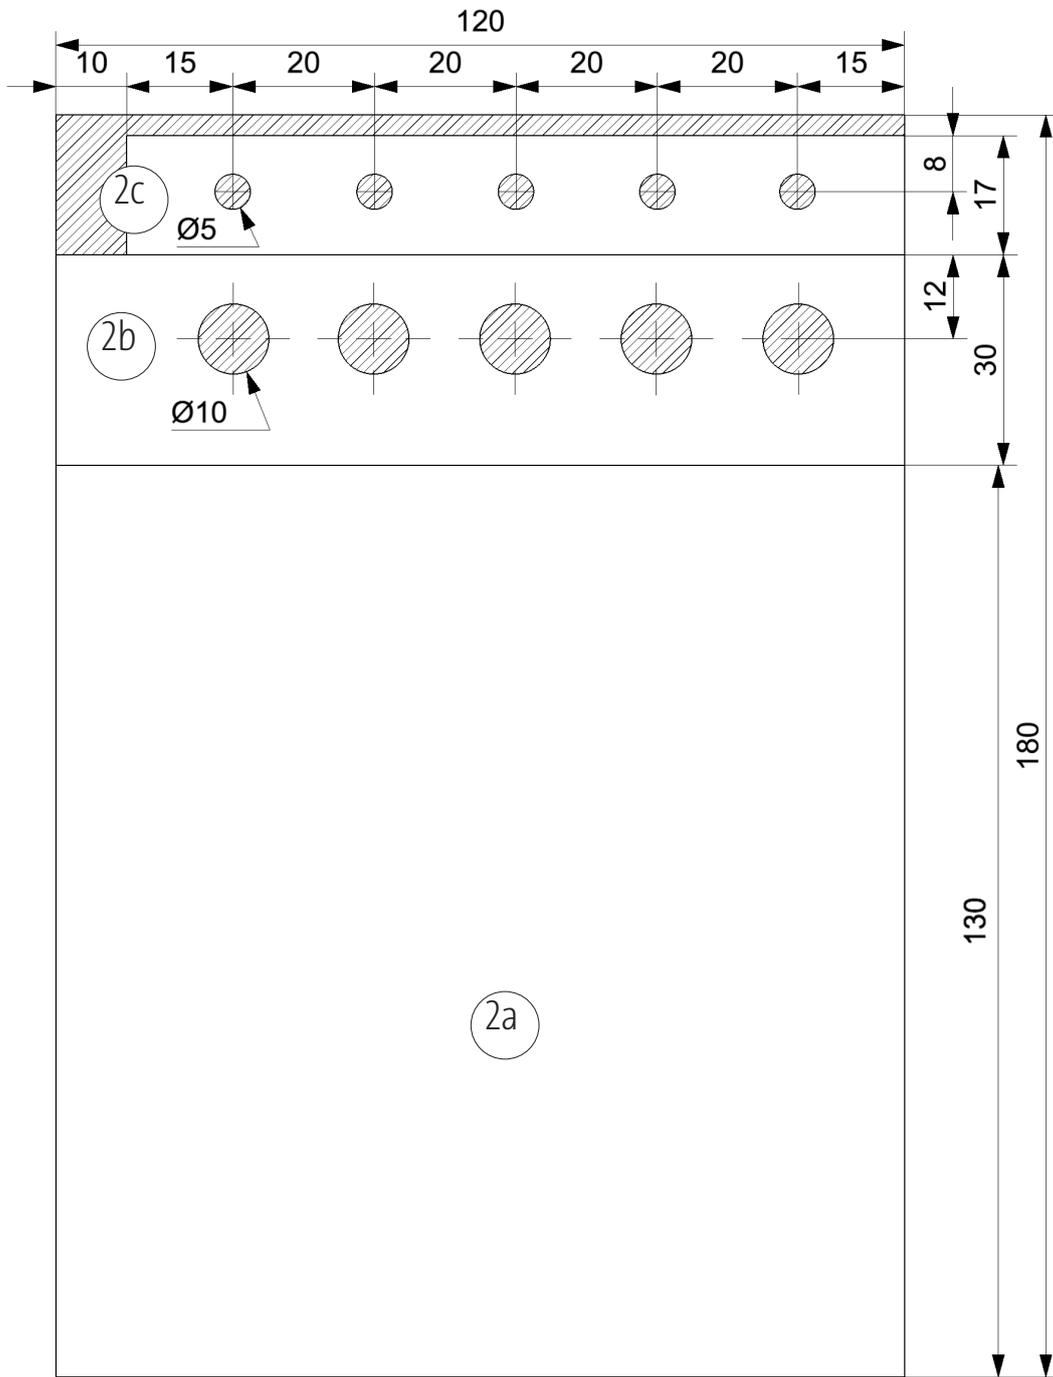

Instructions 120.298
Office Set with Quartz Clock

Template drawer
Scale 1:1

